

COTTON CANDY MACHINE

CAUTION: DO NOT CLEAN MACHINE WITH WATER!! WATER WILL DAMAGE THE MOTOR!!!!

CAUTION: KEEP FOREIGN OBJECTS OUT OF THE HEAD

CAUTION: FLOSS HEAD ROTATES AT 3450 RPM. OPERATOR MUST KEEP HANDS AND FACE CLEAR OF HEAD AND KEEP SPECTATORS AT A REASONABLE DISTANCE.

Operating Instructions

1. Plug in floss machine.
2. Without motor running, fill floss head about 90% full with sugar. DO NOT OVERFILL! When you add sugar to the floss head, always fill it about 90% full. This is necessary to obtain a balanced condition in the floss head or excessive vibration will occur. NEVER ADD SUGAR WHEN MOTOR IS RUNNING! After adding FLOSSUGAR manually rotate head to balance.
3. Flip MAIN SWITCH and HEAT SWITCH TO ON POSITION.
4. Turn heat control knob in the clockwise position to maximum setting. This setting will produce the fastest possible warm up.
5. The machine should begin to make floss in a few seconds. When the unit gets up to heat, it will probably start to smoke. Just turn the heat control knob in the counter clockwise direction to eliminate the smoking.

CAUTION: Never operate equipment for a prolonged period of time with the HEAT CONTROL in a position that causes the sugar to smoke. This will result in excessive carbonization of the ribbon (heat element). If you smell burning sugar or smoke, reduce the heat.

6. Once you find the ideal setting for the HEAT CONTROL, you should be able to operate near this position each time.