

SNOW CONE MACHINE

WARNING!!
MOVING KNIFE BLADE INSIDE GOOSENECK!!
INSERT ICE ONLY!!
KEEP HANDS AND FINGERS OUT!!

TO OPERATE THE SNO-KONETTE

Please do not allow children near machine

1. Switch the motor on
2. Wait for the motor to come to full speed (a minute or so).
3. Fill the gooseneck to within an inch of the top with ice cubes or block ice (no larger than 3" to 4"). The larger the pieces, the better the snow.
4. Push the pusher handle down against the ice in the gooseneck. Apply firm and even pressure to make the best snow. Practice will allow you to gauge when to stop pressing. This allows the ice to resettle against the cutterhead. You may find that you need to relieve the pressure two or three times in a cycle. Over pressing will stall the motor. In this case, simply relieve the pressure and try again. Too much pressure will result in snow that is coarse; too little pressure will make the snow too mushy.
5. Be aware that under the normal operating conditions that the motor will become very warm. A surface temperature of 150 degrees F is normal.

NOTE: Never allow any foreign or metallic objects around the shaver area of the SNO-KONETTE. Blades are often damaged by ice picks and scoops, and debris that may be in ice.